| Installation document for alcohol interlocks | Annex | В | Page | 1 |
|--|-------------|---|---------|-----|
| Product Supplier: Dräger | Drawing no. | : | none | |
| Corporation Model: interlock 7500 | Regulation | : | | |
| Vehicle Type: B13E01 | Directive | : | 2021/12 | 243 |

1. Product Introduction


| No. | Part Name and Description | Picture |
|-----|--------------------------------|---------|
| 1 | 7500 ECU | Dräger |
| 2 | 7500 handset | |
| 3 | Handset clip fixture | |
| 4 | ECU to interlock handset cable | |

| Installation document for alcohol interlocks | Annex | В | Page | 2 |
|--|-------------|---|----------|-----|
| Product Supplier: Dräger | Drawing no. | : | : none | |
| Corporation Model: interlock 7500 | Regulation | : | : | |
| Vehicle Type: B13E01 | Directive | | : 2021/1 | 243 |

2. Product end connectors and vehicle end connectors pin definition


(1) Projection diagram of product end connectors: (ECU end harness)

BYD mating connector in accordance with the relevant requirements of the supplier of alcohol locks.

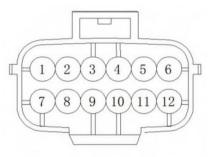

(2) Projection diagram of wire harness end connectors: (Distribution box end harness on vehicle, connect with ECU end connectors)

BYD mating connector in accordance with the relevant requirements of the supplier of alcohol locks.

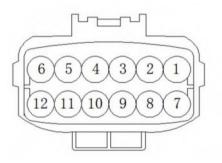


| Installation document for alcohol interlocks | Annex | В | Page | 3 |
|--|-------------|---|----------|-----|
| Product Supplier: Dräger | Drawing no. | : | none | |
| Corporation Model: interlock 7500 | Regulation | : | | |
| Vehicle Type: B13E01 | Directive | : | : 2021/1 | 243 |

(3) Pin Definition

| BYD pin | Wire harness color | Dräger Pin | Location | Connection end | Steady state operating current | Power supply | Remark |
|------------|-----------------------|---------------|-----------------------|-------------------------------|--------------------------------------|-------------------------|-----------|
| 1 | Grey | 1 | Input | Distribution box | | ON position | Input 24V |
| 2 | Brown | I | Output | Alcohol relay | | | |
| 3 | Orange | 2 | Horn/INPUT nr2 | 1 | | | |
| 4 | Purple | 2 | Horn/INPUT nr2 GND | 1 | | | |
| 5 | White | 3 | Horn/INPUT nr1 | 1 | | | |
| 6 | Yellow | 3 | Horn/INPUT nr1 GND | 1 | | | |
| 7 | Blue | 4 | Ignition switch | Distribution box | Max < 2.5A | ON position | Input 24V |
| 8 | Black | 5 | Ground | Ground | | | Ground |
| 9 | Red | 6 | Power | Distribution box | 10A fuse | Constant electricity | Input 24V |
| 10 | White | 14 | Driver retest | Driver retest button 1# | | | Input 0V |
| 11 | White | 15 | / | / | | | |
| 12 | White | 16 | OK position | Drive module | | OK position | Input 24V |

| Installation document for alcohol interlocks | Annex E | 3 | Page | 4 |
|--|-------------|---|---------|----|
| Product Supplier: Dräger | Drawing no. | : | none | |
| Corporation Model: interlock 7500 | Regulation | : | | |
| Vehicle Type: B13E01 | Directive | : | 2021/12 | 43 |

(4) System principle

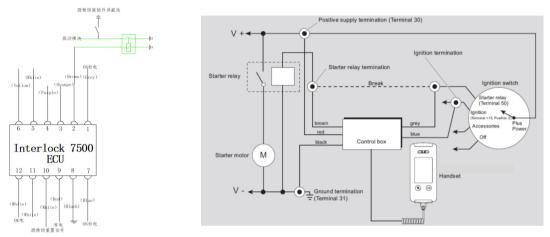


The detailed guide pin definition is shown in the table.

| Installation document for alcohol interlocks | Annex | В | Page | 5 |
|--|-------------|---|--------|-----|
| Product Supplier: Dräger | Drawing no. | | none | |
| Corporation Model: interlock 7500 | Regulation | : | | |
| Vehicle Type: B13E01 | Directive | | 2021/1 | 243 |


3.Product installation


The handset is installed in a place that the driver can reach and is not affected by other components of the vehicle, and is usually installed on the A pillar. The handset is connected to the ECU by the product's built-in harness. The handset is installed on the Handset clip fixture, AS shown in the figure.



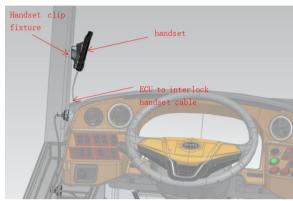

The ECU is concealed and installed below the instrument panel. The ECU harness is connected to the vehicle harness.

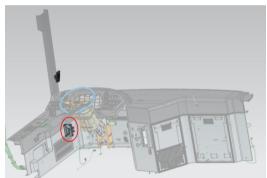

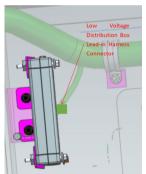

The lead-in harness connector (reserved for the vehicle) of the low-voltage distribution box is located under the auxiliary dashboard, and the detailed position is near the alcohol lock ECU, which can be seen when opening the auxiliary dashboard.

4.Product function

Before starting a vehicle equipped with the alcohol lock device, the driver must undergo an alcohol test. The vehicle can only be started when the measured alcohol concentration is below the set limit value. (Attention: The device is not a safety device and cannot replace the anti-theft locking device)

The alcohol lock device only interferes with vehicle movement before the vehicle starts and does not affect the vehicle in motion.

5. Product working principle

Only after the alcohol blowing test and the alcohol lock output high level gives Drive module, Drive module to collect high level signals and sends "the alcohol content normal state", the vehicle can be allowed to start, in other cases the alcohol lock does not output the high level, which is kept by Drive module to send "alcohol content state - excessive or unenabled" message, so that the vehicle can not be able to drive.

EN 50436-7:2016 Annex C 3B: Pseudo-digital installation.

| Installation document for alcohol interlocks | Annex | В | Page | 6 |
|--|-------------|---|--------|-----|
| Product Supplier: Dräger | Drawing no. | : | none | |
| Corporation Model: interlock 7500 | Regulation | : | | |
| Vehicle Type: B13E01 | Directive | : | 2021/1 | 243 |

6.Functional testing process

| | 6.Functional testing process | | | | | |
|----|--------------------------------|--|--|--|--|--|
| No | Operation Steps | Implementation Results | | | | |
| 1 | Power, complete self-check | Display "Preparing for test".Ready for test.please blow indicates that the equipment is ready to be measured. | | | | |
| 2 | Activate the illegal operation | When sending a continuous signal, the mouth is evenly blown, and then the signal stops immediately, and then inhaled from the bite until the short signal is made. If you do not use air blowing and breathing techniques to provide an exhalation sample in the right way, you will show retesting. Use the ok button to confirm. The equipment request reprovides the exhalation sample. If the blow is too strong or weak, the corresponding message will be displayed. The equipment request reprovides the exhalation sample. After providing full exhalation samples, the test results will be shown to test normal or test errors. | | | | |
| 3 | Pass-test | The tests were shown to be normal and led were green light (only interlock 7500). Allow the starting car to display the free start time: and the timer specifies how long it can start the car. The device is ready in place after starting and displays drive safely. | | | | |
| 4 | Test failed | The test is not always shown and led is red (only interlock 7500), and then the next test time is displayed: and the timer displays the remaining, minute, and second, disabled. Leds did not glow when the device did not approve other samples. | | | | |

| Installation document for alcohol interlocks | Annex B | Pag | e 7 |
|--|-------------|-------|---------|
| Product Supplier: Dräger | Drawing no. | : nor | ne |
| Corporation Model: interlock 7500 | Regulation | : | |
| Vehicle Type: B13E01 | Directive | : 202 | 21/1243 |

| No | Products | Installation Location/Photo | Fasteners | Number of fasteners |
|----|-----------------------|---|--|------------------------|
| | | Figure 7.1 1.1 Secure the Handset clip fixture to the interior panel with 4 pieces open end countersunk head blind rivets. | Open end countersunk head blind rivet | 2 |
| 1 | Alcohol Lock Parts | Figure 7.2 1.2 Secure the Alcohol Lock ECU to the bracket | Type 1 hex bolts and nuts | 4 |
| | | using 4 pieces of type 1 hex bolts and nuts. | | |
| | | Figure 7.3 1.3 Attach the handset to the Handset clip fixture. | 1 | / |

7. Installation steps

| Installation document for alcohol interlocks | Annex I | 3 | Page | 8 |
|--|-------------|---|--------|-----|
| Product Supplier: Dräger | Drawing no. | | none | |
| Corporation Model: interlock 7500 | Regulation | : | | |
| Vehicle Type: B13E01 | Directive | : | 2021/1 | 243 |

7. Installation steps Number of No Products Fasteners Installation Location/Photo fasteners 1 1 Figure 7.4 2.1 The approximate location of the Alcohol Lock ECU harness is shown in the figure, and it is fixed by tie-wrap and sponge tape. 1 Alcohol Lock 2 Parts Harness 1 1 Figure 7.5 2.2 Alcohol Lock ECU harness and handset spiral harness mated in the location shown. Figure 7.6 2.3 Connect product end connectors to Low Voltage Distribution Box Lead-in Harness Connectors, Installation is complete.

Note: Vehicle type B13E01 equipped with alcohol lock as standard configuration (alcohol lock ECU, alcohol lock blowing machine installed on vehicle before vehicle registration), if the user subsequently need to replace to other alcohol lock products, please use the reserved connectors on vehicle-side, the layout of the location see Figure 7.6. and Figure 7.7.

And also please See Table 2.1 for specific connector definition functions.